

Warranty

This product has a limited warranty, subject to certain terms and conditions all of which can be found at <http://airstash.com/warranty>. Wearable Inc. warrants that Airstash will perform substantially in accordance with the accompanying written materials for a period of ninety (90) days from the date of original shipment (“Warranty Period”). Wearable Inc.’s liability is limited to repair, exchange for new or refurbished unit, or refund of purchase price of the product, excluding shipping and handling charges. Wearable Inc. shall not be liable to the purchaser or end user for any loss arising out of the use of or inability to use the product. Certain exclusions and limitations apply to the Warranty. Your statutory rights are not affected. To obtain warranty service, contact Wearable following the contact instructions at <http://airstash.com/support>. You will need proof of the original date of purchase, the serial number of the device, and a detailed description of the problem you are experiencing. You must obtain a Return Material Authorization (“RMA”) number and instructions from Wearable Inc. prior to sending in your product.

Use, Care, & Compliance

Please see the User Manual at <http://airstash.com/support> for use, care, and government compliance. This product is not intended to be used within any jurisdiction where the proper governmental authorizations are not in place.

AirStash™

Quick Start Guide

Congratulations on your AirStash™ purchase!

This Quick Start Guide will help you get your AirStash up and running quickly. For further instructions, please download the User Manual at airstash.com/support.

SD Card Insertion

Insert an SD card into the slot on the end of AirStash until the card is firmly seated (don't force it — you won't hear or feel a "click" when the card is fully inserted). The card will protrude out of AirStash slightly to facilitate easy removal. The card can only be inserted in one way. If you are unsure of how to insert the card, please consult the user manual.

USB Operation

SD Card Data Transfer: Plug AirStash into a computer's USB port to access the SD card. When an SD or SDHC card is present, the card should show up on your computer display as a USB flash drive. You can now drag & drop files to the SD card. The red USB icon will light up to indicate USB data transfer. Wireless transfer will be halted while AirStash is connected to the computer.

When you are ready to remove AirStash from the computer, always eject or unmount AirStash from the computer to prevent data corruption on the SD card. On most operating systems, this can be done by right-clicking on the drive and choosing "Eject".

Battery Charging: AirStash will charge its internal battery when plugged into a computer, powered USB hub, or stand-alone USB charger. The red USB icon will slowly rise and fall in brightness to indicate charging and will stop once AirStash is fully charged. **Please allow up to 2 hours to fully charge AirStash.**

If AirStash is plugged into a stand-alone USB charger, the battery will charge and wireless communication will continue without interruption.

Wireless Operation

Wireless On: Press and hold the power button until the green wireless icon turns on, then release the power button. The green wireless icon will then blink 3 times to indicate that WiFi power is on. The wireless icon will continue to flash every second to indicate that AirStash is communicating wirelessly. If the icon does not blink when you hold down the button, charge the battery via the USB connector as described above.

Wireless Access

1. Open your wireless device's WiFi settings and select the AirStash network (SSID).
2. Open your device's browser and type airstash.net in the address bar to access AirStash. Bookmark this page to access your files quickly and easily. On an iPhone, iPod touch, or iPad, tap the + button at the bottom of the page and choose "Add to Home Screen" to add an AirStash icon to the home screen of your device.
3. Tap or click to choose a file to view on your device. **Wireless Off:** To turn off WiFi, press and hold the button until the green wireless icon blinks three times, then release the button. When WiFi is off, the wireless icon does not blink.

Firmware Updates

Please go to <http://airstash.com/support> for the latest firmware update.